## Wild Kids Sky Bar



THANK YOU FOR PURCHASING THE WILD KIDS SKY BAR! WE HOPE YOU LOVE IT!

Before starting assembly, check the parts list and verify everything has arrived as you expected, and if not please reach out to us by email or phone.


Email: hello@wildkidsplay.com

Phone: 317-219-5647

We also love connecting with our customers! Find us online at:



### **Parts List**

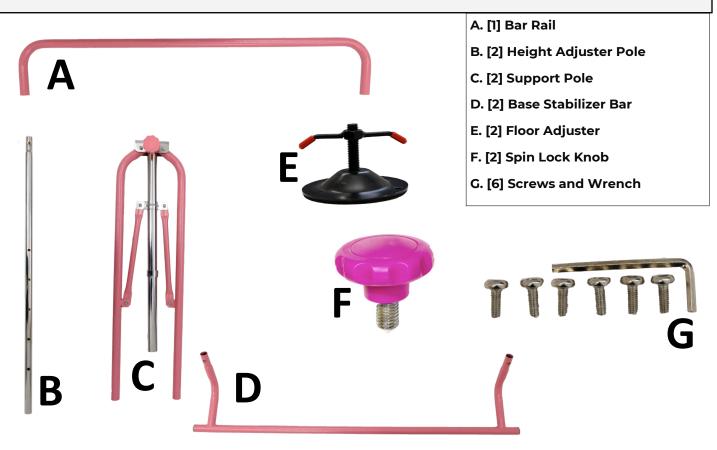

# Wild Kids Sky Bar Assembly Instructions

WARNING! Do not completely tighten screws while assembling the bar. Tighten them at the end so the bar is level.

**Step 1:** Insert the Height Adjuster Pole (B) into the Bar Rail (A). Align the screw holes and gently hand tighten the screws (G) on both sides.

**Step 2:** Fold out the Support Poles (C) and screw on Floor Adjusters (G) Then align the Support Poles (C) and Base Stabilizer Bar (D)

**Step 3:** Line up screw holes, then insert and gently hand tighten the screws (G) on all for ends of the Base Stabilizer Bars (D)

**Step 4:** Insert assembled top half of the bar into the top of the Support Pole (C)


**Step 5:** Next, insert the Spin Lock (F) into a Height Hole (see picture) at desired height and tighten.

**Step 6**: Last of all, adjust the Floor Adjusters (G) to compensate for uneven flooring. Then tighten all screws with tool provided.

Step 10: Enjoy your new bar!



Fold Sky Bar for easy storage by simply removing Spin Locks (F) and closing legs!

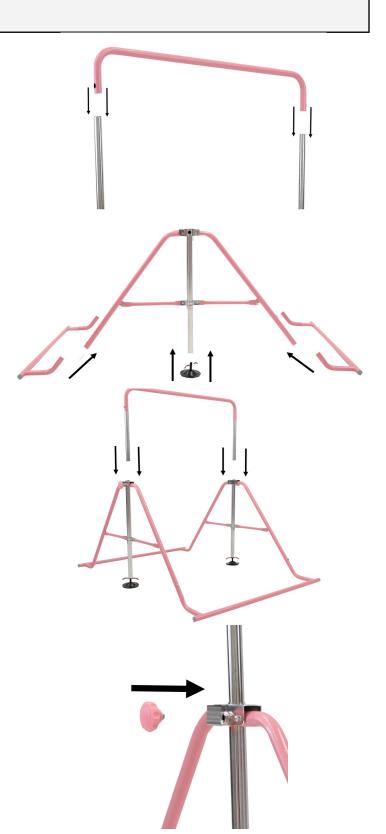

## Wild Kids Sky Bar

# Important Safety Information! Please Read!

- ◆ This bar is only meant for indoor use. If used outside, make sure it is not left out overnight.
- For safety and stability, only use the bar if it has a mat between the bar legs.
- ♠ Any activity involving motion or height creates the possibility of serious injury. This equipment is intended for use only under supervision. Before use, know your own limitations and the limitations of the equipment. The apparatus should always be placed on a firm, flat surface. Always inspect the equip to ensure the locking devices are secure before use. Failure to do so may result in serious injury.
- Always check that screws are tight and securely in place before use.

### To Adjust Bar Height:

#### \*\*Two people are recommended to adjust the bar height\*\*

- ◆ Remove the Spin Lock (Part F) by turning it counter clockwise.
- ◆ Raise or lower the bar to the height you need, line up the holes and insert Spin Lock (F). Insure it inserts into a new support hole before tightening.
- ◆ Tighten the Spin Lock (Part F) by turning it clockwise.

## Wild Kids and Z Athletic

**Wild kids** is the sister company to Z Athletic, who strives to bring professional quality products directly to your home.

We design and sell our products directly, giving the customer the highest quality for the best prices.



We position employees oversees to monitor our manufacturing process, ensuring a high quality product that we can adapt as customers recommend adjustments.

Our products are designed with the customer in mind, whether you're practicing in a gym or playing with your toddler at home. We have over 27 years of experience making bar and foam products and can't wait for you to enjoy your new product.

This Wild Kids Sky Bar come with a 1 year manufacturer's warranty.